

**Wireless Asset Sensor**

---

# **Wireless Asset Sensor User Manual**

**Copyright©Netvox Technology Co., Ltd.**

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

## **cTable of Content**

1. Introduction.....	2
2. Appearance .....	3
3. Main Features .....	3
4. Set up Instruction.....	4
5. Data Report.....	5
6. Installation .....	7
7. Important Maintenance Instruction .....	7

## 1. Introduction

R313D is a Wireless Asset Sensor for Netvox ClassA type devices based on the LoRaWAN open protocol.

R313D sends RSSI and SNR following regular report time interval to indicate whether gateway signal strength falls within the standard range


### **LoRa Wireless Technology:**

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

### **LoRaWAN:**

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

## 2. Appearance

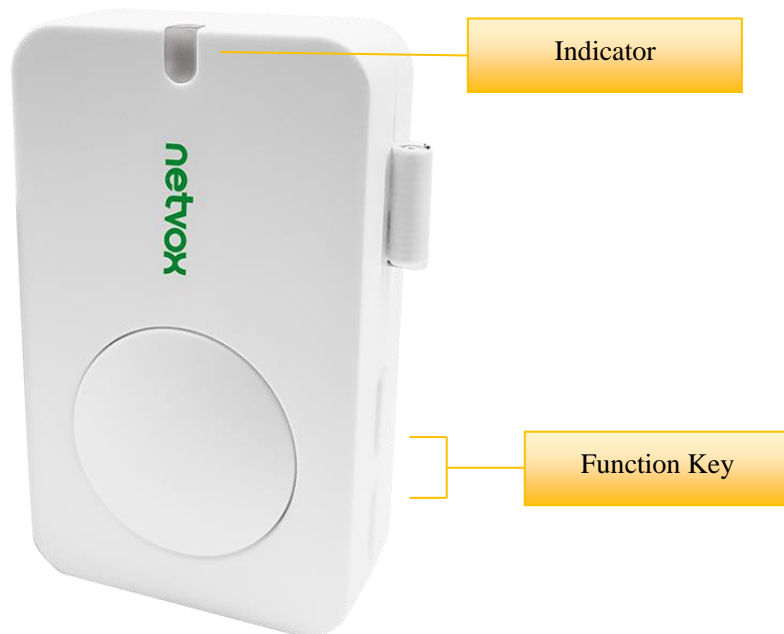

## 3. Main Features

- Apply SX1276 wireless communication module
- 2 sections of 3V CR2450 button battery power supply
- Report RSSI and SNR
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum technology
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Available third-party platform: Actility / ThingPark, TTN, MyDevices/Cayenne
- Low power consumption and long battery life
- Improved power management for longer battery life

### Battery Life:

- Please refer to web: [http://www.netvox.com.tw/electric/electric\\_calc.html](http://www.netvox.com.tw/electric/electric_calc.html)
- At this website, users can find battery life time for various models at different configurations.

1. Actual range may vary depending on environment.
2. Battery life is determined by sensor reporting frequency and other variables.

## 4.Set up Instruction

### On/Off

Power on	Insert batteries. (users may need a flat blade screwdriver to open); insert two sections of 3V CR2450 button batteries and close the battery cover.)
Turn on	Press any function key till the green and red indicator flash once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds till the green indicator flashes for 20 times.
Power off	Remove Batteries.
Note:	<ol style="list-style-type: none"> <li>1. Remove and insert the battery; the device memorizes previous on/off state by default.</li> <li>2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.</li> <li>3. Press any function key and insert batteries at the same time; it will enter engineer testing mode.</li> </ol>

### Network Joining

Never joined the network	<p>Turn on the device to search the network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Had joined the network	<p>Turn on the device to search the previous network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Fail to join the network (when the device is on)	<p>First two mins:wake up every 15 seconds to send request.</p> <p>After two mins: enter sleeping mode and wake up every 15 minutes to send request.</p> <p>Note: Suggest to remove batteries if the device is not used to save power.</p> <p>Suggest to check device verification on gateway.</p>

### Function Key

Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes for 20 times: success</p> <p>The green indicator remains off: fail</p>
Press once	<p>The device is in the network: the green indicator flashes once and sends a report</p> <p>The device is not in the network: the green indicator remains off</p>

### Sleeping Mode

The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>
The device is on but not in the network	<p>First two mins: wake up every 15 seconds to send request.</p> <p>After two mins: enter sleeping mode and wake up every 15 minutes to send request.</p> <p>Note: Suggest to remove batteries if the device is not used.</p> <p>Suggest to check device verification on gateway.</p>

### Low Voltage Warning

Low Voltage	2.4V
-------------	------

## 5. Data Report

The device will immediately send a version packet report along with an uplink packet including RSSI and SNR.  
The device sends data in the default configuration before any configuration is done.

Maximum time: 3600s

Minimum time: 3600s

Default reportchange:

Battery ---- 0x01 (0.1V)

Note: The real data sending cycle is subject to the programming configuration before shipment.

The reported data is decoded by the Netvox LoRaWAN Application Command document and <http://www.netvox.com.cn:8888/cmddoc>

Data report configuration and sending period are as following:

Min Interval (Unit:second)	Max Interval (Unit:second)	Reportable Change	Current Change $\geq$ Reportable Change	Current Change < Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0.	Report per Min Interval	Report per Max Interval

Config ReportReq	R313D	0x01	0x4E	MinTime (2bytes Unit:s)	MaxTime (2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Reserved (4Bytes,Fixed 0x00)	
Config ReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes,Fixed 0x00)			
ReadConfig ReportReq		0x02		Reserved (9Bytes,Fixed 0x00)				
ReadConfig ReportRsp		0x82		MinTime (2bytes Unit:s)	MaxTime (2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Reserved (4Bytes,Fixed 0x00)	

### (1) Command Configuration:

MinTime = 1min 、 MaxTime = 1min 、 BatteryChange = 0.1v

Downlink: 014E003C003C0100000000 003C(H<sub>ex</sub>) = 60(D<sub>ec</sub>)

Response:

814E00000000000000000000 ( Configuration success )

814E01000000000000000000 ( Configuration failure )


### (2) Read Configuration:

Downlink: 024E00000000000000000000

Response:


824E003C003C0100000000 ( Current configuration )

**Example#1** based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

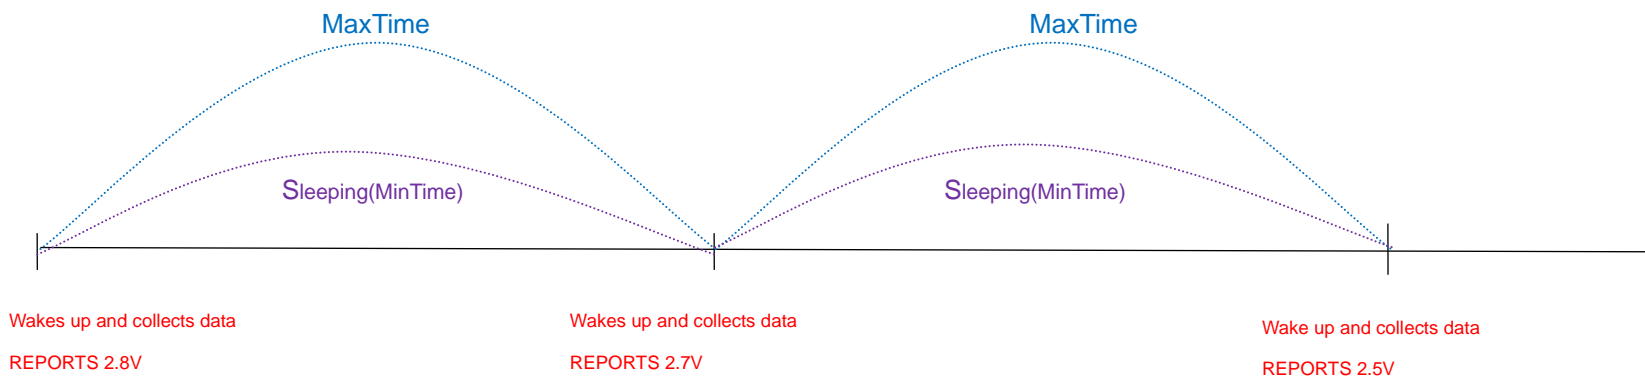


Note: MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BtteryVoltageChange value.

**Example#2** based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

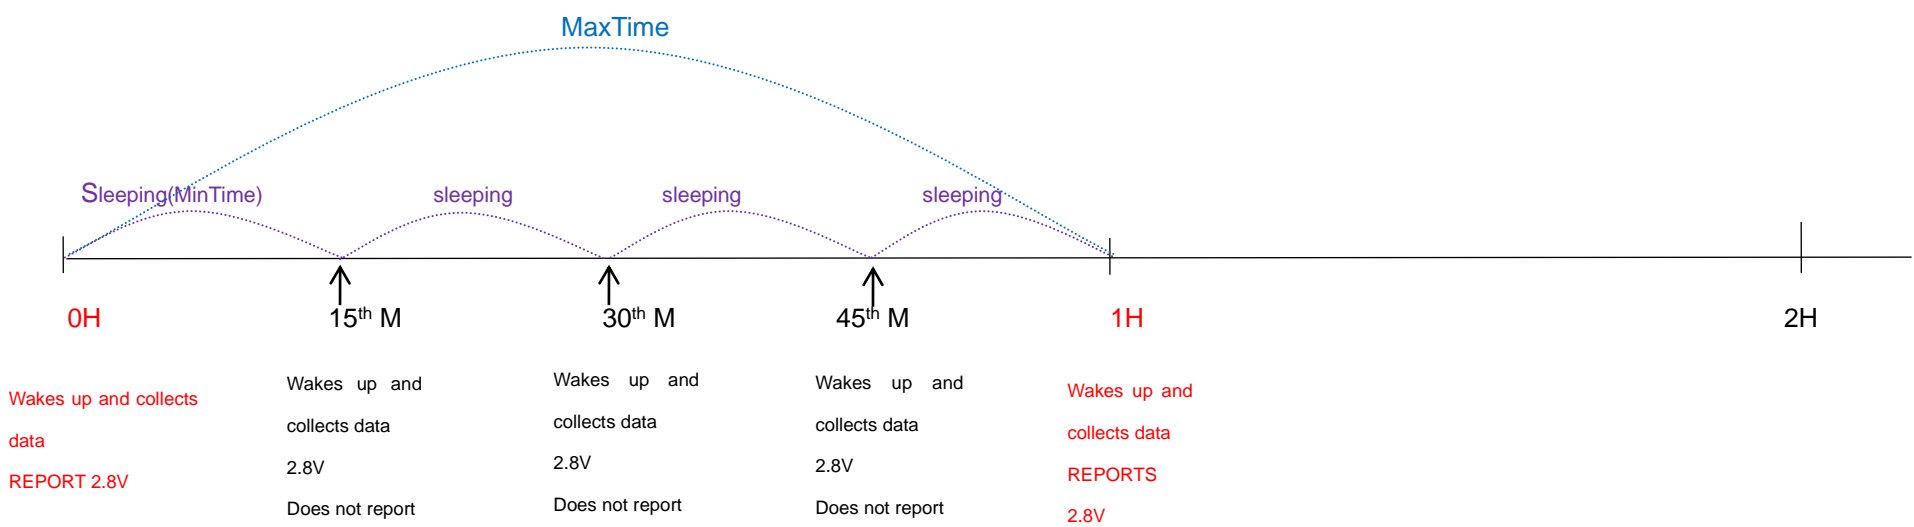

**Example#3** based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

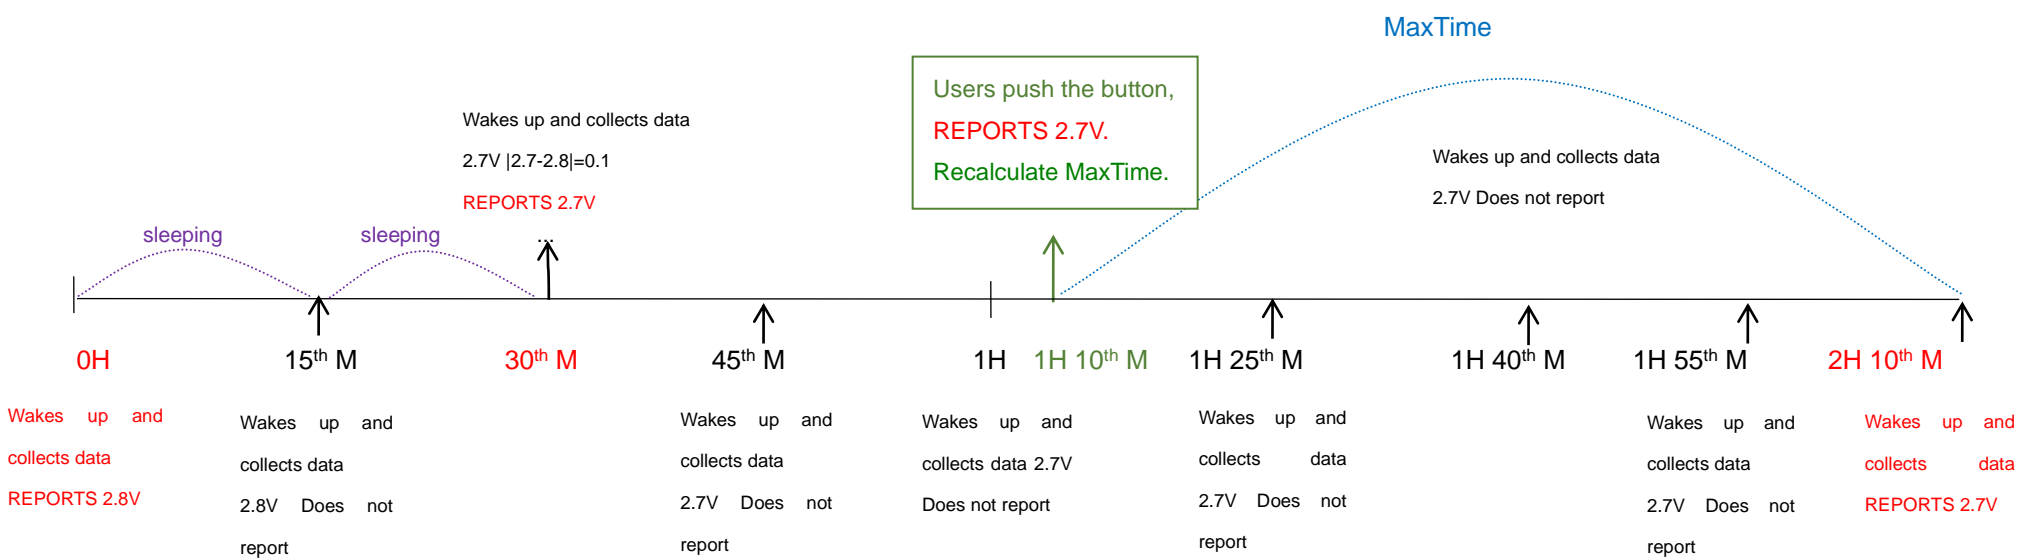


Notes:

- 1) The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
- 2) The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
- 3) We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
- 4) Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

## 6. Installation

This product does not have a waterproof function.  
After the screening is completed, please place it indoors.

### Installation and Precautions

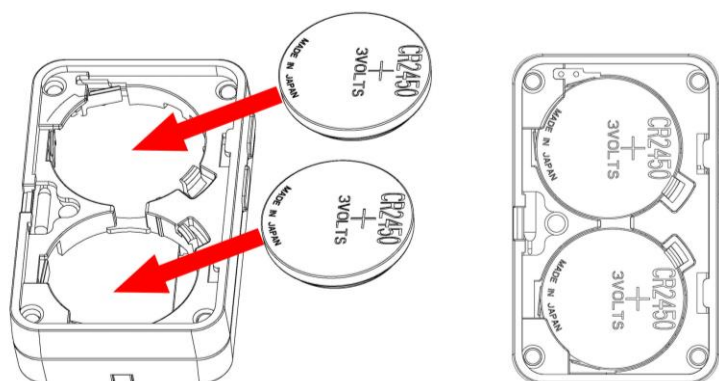

Note: To install the battery, use a screwdriver or similar tool to assist in opening the battery cover.

## 7. Important Maintenance Instruction

Your device is a product of superior design and craftsmanship and should be used with care. The following suggestions will help you use the warranty service effectively.

- Keep the equipment dry. Rain, moisture, and various liquids or moisture may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This can damage its detachable parts and electronic components.
- Do not store in excessive heat. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not apply with paint. Smudges can block debris in detachable parts and affect normal operation.
- Do not throw the battery into a fire to prevent the battery from exploding. Damaged batteries may also explode.

All of the above suggestions apply equally to your device, battery and accessories. If any device is not working properly. Please take it to the nearest authorized service facility for repair.