

Wireless Light Sensor

Wireless Light Sensor

R313G User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX

Technology. The specifications are subject to change without prior notice.

Table of Content

1. Introduction	2
2. Appearance	3
3. Main Features	3
4. Set up Instruction	4
5. Data Report	5
6. Installation	9
7. Important Maintenance Instruction	10

1. Introduction

R313G is a long-distance light sensor based on the LoRaWAN open protocol (Class A).

LoRa Wireless Technology:

LoRa is a wireless communication technology famous for its long-distance transmission and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation technique greatly extend the communication distance. It can be widely used in any use case that requires long-distance and low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. It has features like small size, low power consumption, long transmission distance, strong anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance



3. Main Feature

- Compatible with LoRaWAN •
- 2 sections 3V CR2450 button battery power supply
- Report current surrounding illuminance
- Simple operation and setting
- Protection level IP30
- Compatible with LoRaWANTM Class A
- Frequency hopping spread spectrum technology
- Configuration parameters can be configured through third-party software platforms, data can be read and alarms can be set via SMS text and email (optional)
- Available third-party platform: Actility / ThingPark, TTN, MyDevices/Cayenne
- Low power consumption and long battery life

Note*:

Battery life is determined by the sensor reporting frequency and other variables, please refer to

http://www.netvox.com.tw/electric/electric_calc.html On this website, users can find battery life time for varied models at

different configurations.

4. Set up Instruction

On/Off

	Insert batteries (users may need a screwdriver to open)			
Power on	Insert two sections of 3V CR2450 button batteries and close the battery cover.			
	Note: Require 2 button batteries to supply power at the same time.			
Turn on	Press any function key and indicator flashes once meaning it is turned on successfully.			
Turn off (Restore to factory setting)	ress and hold the function key for 5 seconds and green indicator flashes 20 times.			
Power off Remove Batteries.				
	1. Remove and insert the battery; the device memorizes previous on/off state by default.			
	2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor			
Note:	inductance and other energy storage components.			
	3. If press any function key and insert batteries at the same time, it will enter engineer testing			
	mode.			

Network Joining

Fail to join the network	Suggest to check the device verification information on the gateway or consult your platform server provider.
Had joined the network (not restore to the factory setting)	Turn on the device to search the previous network. The green indicator stays on for 5 seconds: success The green indicator remains off: fail
Never joined the network	Turn on the device to search the network. The green indicator stays on for 5 seconds: success The green indicator remains off: fail

Function Key

	Restore to factory setting / Turn off
Press and hold for 5 seconds	The green indicator flashes 20 times: success
	The green indicator remains off: fail

Press once	The device is in the network: green indicator flashes once and sends a report
	The device is not in the network: green indicator remains off

Sleeping Mode

The device is on and in the	Sleeping period: Min Interval. When the reportchange exceeds setting value or the state changes: send a data report according
network	to Min Interval.

Low	Voltage	Warning
-----	---------	---------

Low Voltage

\mathbf{r}	Λ	v
∠.	4	v

5. Data Report

When the device is powered on and activated, it will immediately send a version package.

Data will be reported once per hour by default setting.

Default setting:

Maximum time: 3600s

Minimum time: 3600s

BatteryChange: 0x01 (0.1V)

IlluminanceChange:0x32 (50 lux)

Note:

1. The cycle of the device sending the data report is according to the default.

2. The interval between two reports must be the MinTime.

3. R313G defaults Max Interval = 3600s, Min Interval = 3600s

(If there are special customized shipments, the settings will be changed according to customer's requirement.)

The reported data is decoded by the Netvox LoRaWAN Application Command document and

http://www.netvox.com.cn:8888/cmddoc

Data report configuration and sending period are as following:

Min Interval	Max Interval	Demonstrahle Champer	Current Change≥	Current Change <
(Unit:second)	(Unit:second)	Reportable Change	Reportable Change	Reportable Change
Any number between	Any number between	Con not be 0	Report	Report
1~65535	1~65535	Can not be 0.	per Min Interval	per Max Interval

5.1 Example of ReportDataCmd

FPort: 0x06

Bytes	1	1	1	Var(Fix=8 Bytes)
	Version	DeviceType	Report Type	NetvoxPayLoadData

Version– 1 byte –0x01——the Version of NetvoxLoRaWAN Application Command Version

DeviceType-1 byte – Device Type of Device

The device type is listed in Netvox LoRaWAN Application Devicetype doc

ReportType – 1 byte –the presentation of the NetvoxPayLoadData, according the devicetype

NetvoxPayLoadData– Fixed bytes (Fixed =8bytes)

Device	DeviceType	ReportType	NetvoxPayLoadData		
R313G	0x04	001	Battery	illuminance	Reserved
K315G	0x04	0x01	(1Byte, unit:0.1V)	(2Bytes,unit:1Lux)	(5Bytes,fixed 0x00)

Uplink: 0104011C03E8000000000

1st byte (01): Version

 2^{nd} byte (04): Device Type 0x04 - R313G

3rd byte (01): Report Type

4th byte (1C): Battery -2.8v, 1C Hex=28 Dec 28*0.1v=2.8v

 $5^{\text{th}} 6^{\text{th}}$ byte (03E8): illuminance – 1000 LUX, 3E8 Hex=1000 Dec

 $7^{\text{th}} \sim 11^{\text{th}}$ byte (000000000): Reserved

5.2 Example of ConfigureCmd

FPort: 0x07

Bytes	1	1	Var(Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayLoadData

CmdID–1 byte

DeviceType-1 byte – Device Type of Device

NetvoxPayLoadData- var bytes (Max=9bytes)

Description	Device	CmdID	Device Type	NetvoxPayLoadData					
Config ReportReq		0x01		MinTime (2bytes Unit:s)	MaxTime (2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Illuminancechange (2bytes Unit: 1Lux)	Reserved (2Bytes,Fixed 0x00)	
Config ReportRsp	R313G	0x81	0x04		Status (0x00_success)		Reserved (8Bytes,Fixed 0x00)		
ReadConfig ReportReq		0x02		Reserved (9Bytes,Fixed 0x00)					
ReadConfig ReportRsp		0x82		MinTime (2bytes Unit:s)	MaxTime (2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Illuminancechange (2bytes Unit: 1Lux)	Reserved (2Bytes,Fixed 0x00)	

6

(1) Configure R313G device parameter:

MinTime = 1 min, MaxTime = 1 min, BatteryChange = 0.1 v, Illuminancechange = 200 lux

Downlink: 0104003C003C0100C80000 $003C(H_{ex}) = 60(D_{ec}), C8(H_{ex}) = 200(D_{ec})$

Response:

(2) Read R313G device parameter:


Downlink: 02040000000000000000000

Response:

8204003C003C0100C80000 (Current parameter)


5.3 Example for MinTime/MaxTime logic

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

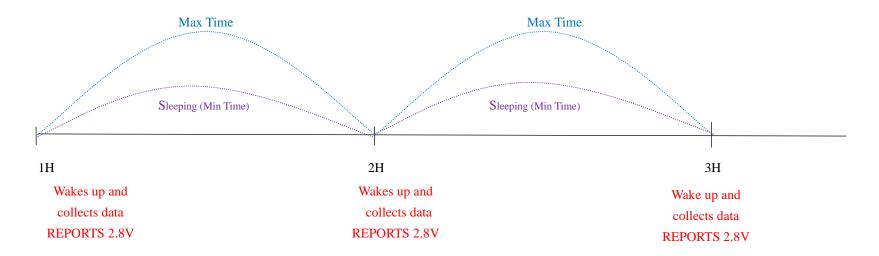

MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

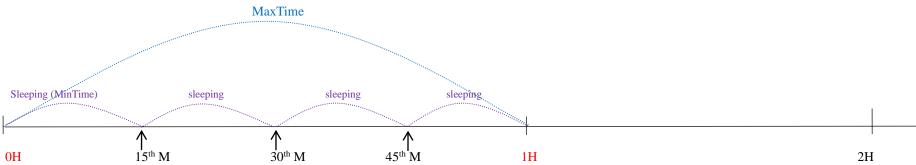

Wakes up and collects data **REPORT 2.8V**

2.8V Does not report

Wakes up and

collects data


Wakes up and collects data 2.8V Does not report

collects data 2.8V Does not report

Wakes up and

Wakes up and collects data **REPORTS 2.8V**


Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

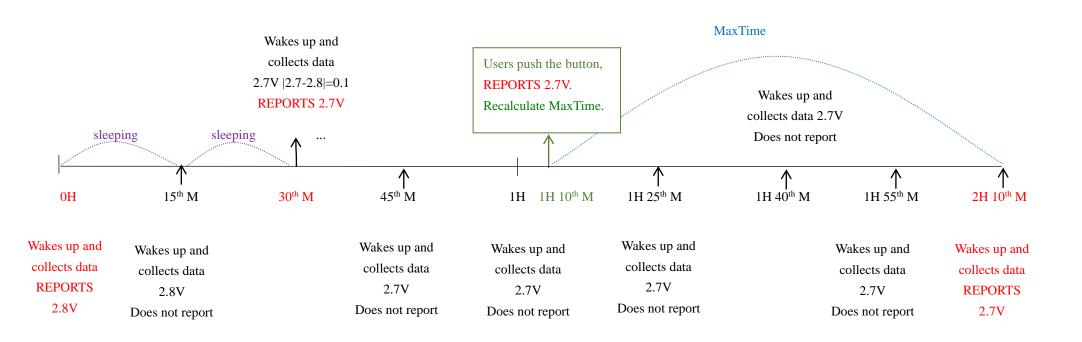

Notes:

- The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
- 2) The data collected is compared with the last data <u>reported</u>. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
- 3) We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
- 4) Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

5.4 Difference between R313B and R313G

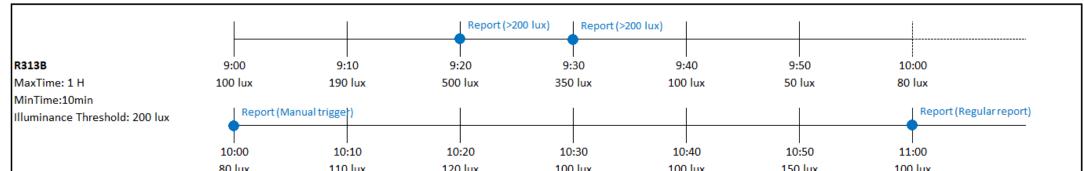

	00107	110 104	120 100	100 100	100 107	100 107	100 104	

		Differen	ce >200 lux Report	Difference	ce>200 lux Report		
		190-50	0 =310	350-10	00 =250		
R313G	9:00	9:10	9:20	9:30	9:40	9:50	10:00
MaxTime: 1 H	100 lux	190 lux	500 lux	350 lux	100 lux	50 lux	80 lux
MinTime:10min Illuminance Change: 200 lux	Report (M	anual trigger)	I	I	I	I	Report (Regular report)
indiminance change. 200 lux	•						••••
	10:00	10:10	10:20	10:30	10:40	10:50	11:00
	80 lux	110 lux	120 lux	100 lux	100 lux	150 lux	100 lux

6. Installation

- (1) This product does not have a waterproof function. After the joining is completed, please place it indoors.
- (2) The dust in the installation position of the equipment needs to be wiped clean and then affixed to the equipment.
- Remove the 3M adhesive on the back of the light sensor and attach the device to the position where the light value needs to be detected (please do not stick it to a rough surface to prevent the device from falling off after a long time). Note:
 - (1) Wipe the surface clean before installation to avoid dust on the surface and affect the adhesion of the device.
 - (2) Do not install the device in a metal shielded box or other electrical equipment around it to avoid affecting the wireless transmission of the device.



2. When the illumination value detected by the illuminationsensor is compared with the last reported illumination value,when the set value is exceeded (default 50 lux), the currentlydetected illumination value is sent.

This figure shows the scene where the light sensor (R313G) is applied in the office.

It can also be applied to the following scenarios:


• Home

- School
- Storage room
- Hospital
- Bar
- **Stairs**
- Agricultural greenhouse

Places which need to detect the illumination value



(3) The battery installation method is shown in the figure below (battery with "+" facing outward).

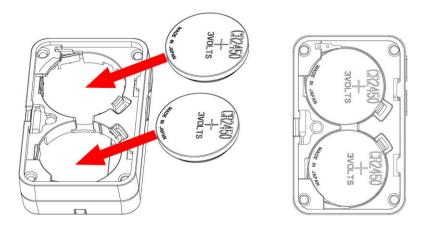

Note:

To install the battery, use a screwdriver or similar tool to assist in opening the battery cover.

7. Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.