

Wireless CO Sensor

R718PA1 User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Table of Contents

1. Introduction.....	2
2. Appearance.....	3
3. Features.....	3
4. Set Up Instruction.....	4
5. Data Report.....	5
5.1 ReportDataCmd.....	5
5.2 ReportConfiguration.....	6
5.3 GlobalCalibrateCmd.....	8
5.4 AlarmThresholdCmd.....	9
5.5 LoRaWANRejoin.....	10
6. Installation.....	11
7. Important Maintenance Instructions.....	12

1. Introduction

R718PA1 is a Class A device based on the LoRaWAN™ protocol of Netvox and is compatible with the LoRaWAN protocol.

R718PA1 can be connected to a corresponding carbon monoxide sensor (RS485) to report the concentration of carbon monoxide collected by the device to the corresponding gateway. The device is compatible with the LoRaWAN protocol.


LoRa Wireless Technology

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance

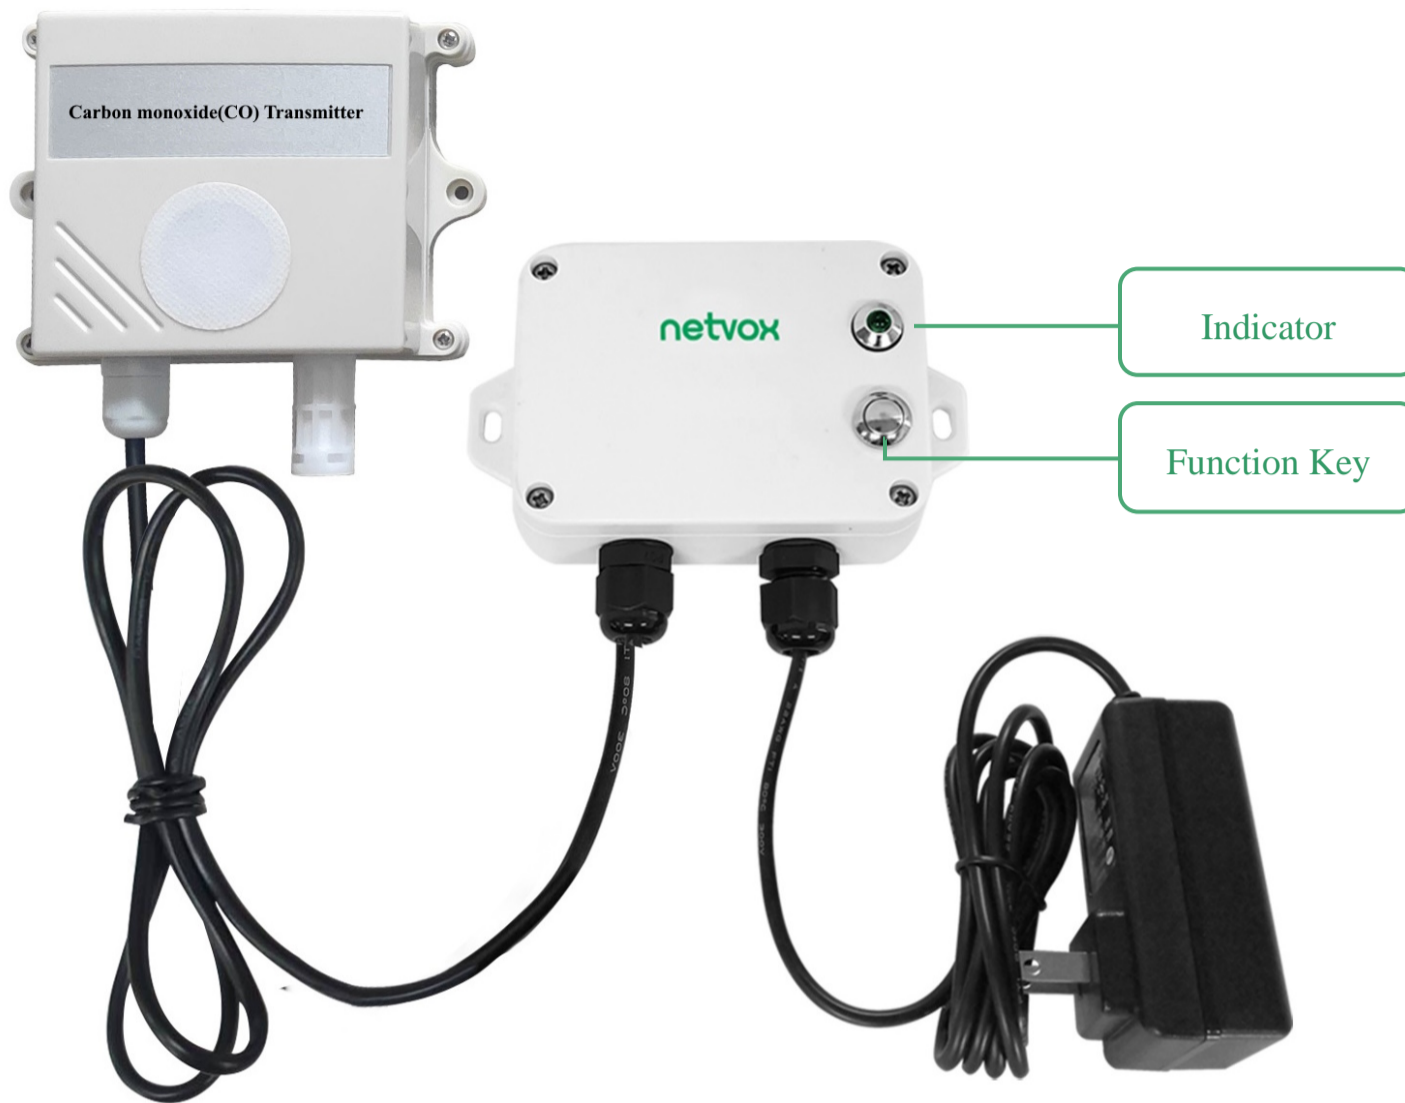

3. Features

- SX1276 wireless communication module
- 12V DC power supply
- CO Concentration detection
- Magnetic base
- Protection level: Main body IP65 / IP67 (optional), CO Sensor IP54
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne

4. Set Up Instruction

On/Off

Power on	DC12V adapter
Turn on	DC12V power supply, the green indicator flashing once means turn on successfully.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds till the green indicator flashes 20 times.
Power off	Remove DC12V adapter.
Note	<ol style="list-style-type: none"> 1. The first 5 seconds after power on, the device will be in engineering test mode. 2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.

Network Joining

Never joined the network	<u>Turn on the device to search the network to join.</u> The green indicator stays on for 5 seconds: success The green indicator remains off: fail
Had joined the network (Not reset to the factory setting)	<u>Turn on the device to search the previous network to join.</u> The green indicator stays on for 5 seconds: success The green indicator remains off: fail
Fail to join the network	Suggest to check the device verification information on the gateway or consult your platform server provider.

Function Key

Press and hold for 5 seconds	<u>Restore to factory setting / Turn off</u> The green indicator flashes 20 times: success The green indicator remains off: fail
Press once	<u>The device is in the network:</u> the green indicator flashes once and sends a report <u>The device is not in the network:</u> the green indicator remains off

5. Data Report

The device will send a version package report immediately after power-on. Then, it will send report data with the concentration of carbon monoxide after it is powered on for 20s.

Default setting:

MaxTime: 0x00B4 (180s)

MinTime: 0x001E (30s) / EU868 0x0078(120s) //The interval time between two packets.

* The value of the maxtime should be greater than (report count *mintime+10), and mintime must be ≥ 10 (s)

* Disable threshold alarm, report count = 1 (Default)

* Enable threshold alarm, report count = 2

Report:

CO Concentration, Range: 0~2000ppm, Unit: 0.1ppm

Threshold Alarm:

Low CO Alarm = 0x00000000000040 (bit6=1)

High CO Alarm = 0x00000000000080 (bit7=1)

Note

Please refer to Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver

<http://www.netvox.com.cn:8888/cmddoc> to resolve uplink data.

5.1 ReportDataCmd

FPort: 0x06

Bytes	1 Byte	1Byte	1 Byte	Var (Fix=8 Bytes)
	Version	ReportType	ReportType	NetvoxPayloadData

Version– 1 byte –0x01—the Version of NetvoxLoRaWAN Application Command Version

DeviceType– 1 byte – Device Type of Device

ReportType – 1 byte –the presentation of the NetvoxPayloadData, according the devicetype

NetvoxPayloadData– Fixed bytes (Fixed =8bytes)

Tips

1. Battery Voltage:

If the battery is equal to 0x00, it means that the device is powered by a DC power supply.

2. Version Packet:

When Report Type=0x00 is the version packet, such as 0157000B04202309250000, the firmware version is 2023.09.25.

3. Data Packet:

When Report Type=0x05 is data packet.

Device	Device Type	Report Type	NetvoxPayloadData				
R718PA1	0x57	0x00	SoftwareVersion (1Byte)	HardwareVersion (1Byte)	DateCode (4Bytes)		Reserved (2Bytes, fixed 0x00)
		0x05	Battery (1Byte, unit: 0.1V)	O3 (2Bytes, 0.1ppm)	CO (2Bytes, 0.1ppm)	NO (2Bytes, 0.1ppm)	Reserved (1Byte, fixed 0x00)
		0x12	Battery (1Byte, unit: 0.1V)	ThresholdAlarm (7Bytes) Bit6_LowCOAlarm Bit7_HighCOAlarm			

Example of Uplink

Packet 1: 01570500FFFF012CFFFF00

1st byte (01): Version

2nd (57): DeviceType — R718PA Series

3rd (05): ReportType

4th (00): Battery — 0V, DC powered

5th – 6th (FFFF): O₃ — FFFF(N/A)

7th – 8th (012C): CO — 30ppm, 12C (HEX) = 300(DEC), 300* 0.1ppm = 30ppm

9th – 10th (FFFF): NO — FFFF(N/A)

11th (00): Reserved

Packet 2: 01571200000000000080

// When the *ThresholdAlarm* is enabled will the packet be sent.

1st byte (01): Version

2nd (57): DeviceType — R718PA Series

3rd (12): ReportType

4th (00): Battery — 0V, DC powered

5th – 11th (0000000000000080): ThresholdAlarm, High CO Alarm

└─ 1000 0000, bit 7=1

5.2 ReportConfiguration

FPort: 0x07

Bytes	1 Byte	1 Byte	Var (Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayloadData

CmdID– 1 byte

DeviceType– 1 byte – Device Type of Device

NetvoxPayloadData– var bytes (Max=9bytes)

Description	Device	CmdID	Device Type	NetvoxPayloadData		
ConfigReportReq	R718PA1	0x01	0x57	MinTime (2Bytes Unit: s)	MaxTime (2Bytes Unit: s)	Reserved (5Bytes,Fixed 0x00)
ConfigReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)	
ReadConfig ReportReq		0x02		Reserved (9Bytes, Fixed 0x00)		
ReadConfig ReportRsp		0x82		MinTime (2Bytes Unit: s)	MaxTime (2Bytes Unit: s)	Reserved (5Bytes,Fixed 0x00)

Note:

(1) The value of the maxtime should be greater than (report count *mintime+10), and mintime must be ≥ 10 (s)

(2) Disable threshold alarm, report type=1 (Default), Enable threshold alarm, report type = 2

(1) Configure the report MinTime = 10s, MaxTime = 60s

Downlink: 0157000A003C0000000000

Device returns:

81570000000000000000000000 (configuration succeed)

81570100000000000000000000 (configuration failed)

(2) Read device configuration parameters

Downlink: 025700000000000000000000

Device returns:

8257000A003C0000000000 (device current configuration parameter)

5.3 GlobalCalibrateCmd

FPort: 0x0E (port = 14, Dec)

Description	Cmd ID	Sensor Type	PayLoad(Fix =9 Bytes)				
			Channel (1Byte, 0_Channel1)	Multiplier (2Bytes, Unsigned)	Divisor (2Bytes, Unsigned)	DeltValue (2Bytes, Signed)	Reserved (2Bytes, Fixed 0x00)
SetGlobal CalibrateReq	0x01	0x05 CO Sensor	Channel (1Byte, 0_Channel1)	Multiplier (2Bytes, Unsigned)	Divisor (2Bytes, Unsigned)	DeltValue (2Bytes, Signed)	Reserved (2Bytes, Fixed 0x00)
SetGlobal CalibrateRsp	0x81		Channel (1Byte, 0_Channel1)	Status (1Byte, 0x00_success)		Reserved (7Bytes, Fixed 0x00)	
GetGlobal CalibrateReq	0x02		Channel (1Byte, 0_Channel1)	Reserved (8Bytes, Fixed 0x00)			
GetGlobal CalibrateRsp	0x82		Channel (1Byte, 0_Channel1)	Multiplier (2Bytes, Unsigned)	Divisor (2Bytes, Unsigned)	DeltValue (2Bytes, Signed)	Reserved (2Bytes, Fixed 0x00)

CO Sensor - Channel 1: 0x00

(1) Increase CO Concentration by 10ppm (Channel: 0x00; Multiplier: 1; Divisor: 1; DeltValue: 100)

Downlink: 0105000001000100640000 // $1*1*100=100$, $100*0.1\text{ppm}=10\text{ppm}$

Device returns:

810500000000000000000000 (configuration succeed)

810500010000000000000000 (configuration failed)

(2) Read device parameter

Downlink: 020500000000000000000000

Device returns:

8205000001000100640000 (device current parameter)

5.4 AlarmThresholdCmd

FPort: 0x10 (port = 16, Dec)

CmdDescriptor	CmdID (1Byte)	Payload(10Bytes)			
SetSensorAlarm ThresholdReq	0x01	Channel (1Byte) 0x00_Channel 1	SensorType(1Byte) 0x00_Disable ALL SensorthresholdSet 0x0B_CO	SensorHighThreshold (4Bytes,Unit:0.1ppm)	SensorLowThreshold (4Bytes,Unit:0.1ppm)
SetSensorAlarm ThresholdRsp	0x81	Status (0x00_success)		Reserved (9Bytes,Fixed 0x00)	
GetSensorAlarm ThresholdReq	0x02	Channel(1Byte) 0x00_Channel1	SensorType(1Byte) 0x00_Disable ALL SensorthresholdSet 0x0B_CO	Reserved (8Bytes,Fixed 0x00)	
GetSensorAlarm ThresholdRsp	0x82	Channel (1Byte) 0x00_Channel 1	SensorType(1Byte) 0x00_Disable ALL SensorthresholdSet 0x0B_CO	SensorHighThreshold (4Bytes,Unit:0.1ppm)	SensorLowThreshold (4Bytes,Unit:0.1ppm)

Note:

- (1) CO sensor type = 0x0B, Channel = 0x00.
- (2) Set SensorHighThreshold or SensorLowThreshold as 0xFFFFFFFF to disable the threshold.
- (3) The last configuration will be kept after the device is factory reset.

(1) Configure Hight CO Alarm = 100ppm, Low CO Alarm =10ppm

Downlink: 01000B000003E800000064 // 3E8(Hex)=1000(DEC), 1000*0.1ppm=100ppm

// 64(Hex)=100(DEC), 100*0.1ppm=10ppm;

Response: 81000000000000000000 (Configuration success)

(2) GetSensorAlarmThresholdReq

Downlink: 02000B000000000000000000

Response: 82000B000003E800000064 (Configuration success)

(3) Clear all SensorThreshold (Sensor type=0x00)

Downlink: 010000000000000000000000

Response: 810000000000000000000000

5.5 LoRaWANRejoin

Check if the device is still in the network. If the device is disconnected, it will automatically rejoin back to the network.

FPort: 0x20 (port = 32, Dec)

CmdDescriptor	CmdID (1Byte)	Payload(5Bytes)	
SetNetvoxLoRaWAN RejoinReq	0x01	RejoinCheckPeriod (4Bytes,Unit:1s)	RejoinThreshold (1Byte)
SetNetvoxLoRaWAN RejoinRsp	0x81	Status (1Byte,0x00_success)	Reserved (4Bytes,Fixed 0x00)
GetNetvoxLoRaWAN RejoinReq	0x02	Reserved (5Bytes,Fixed 0x00)	
GetNetvoxLoRaWAN RejoinRsp	0x82	RejoinCheckPeriod (4Bytes,Unit:1s)	RejoinThreshold (1Byte)

Note:

(1) Set RejoinCheckThreshold as 0xFFFFFFFF to stop the device from rejoining the network.

(2) The last configuration would be kept as user reset the device back to the factory setting

(3) Default setting: RejoinCheckPeriod = 2 (hr) and RejoinThreshold = 3 (times)

(1) Command Configuration

Set RejoinCheckPeriod = 3600s (0x00000E10), RejoinThreshold = 3 times

Downlink: 0100000E1003

Response: 810000000000 (Configuration success)

810100000000 (Configuration failure)

(2) Read current configuration (RejoinCheckPeriod and RejoinThreshold)

Downlink: 020000000000


Response: 8200000E1003

6. Installation

1. R718PA1 has a built-in magnet. It can be attached to the surface of an iron object conveniently and quickly when it is installed.

In order to make the device installation more secure, use screws (purchased) to fix the device to the wall or other surface (such as the installation diagram). The device is screwed by two screws in the middle (purchased by users).

Note: Do not install the device in a metal shielded box or in an environment with other electrical equipment around it to avoid affecting the wireless transmission of the device.

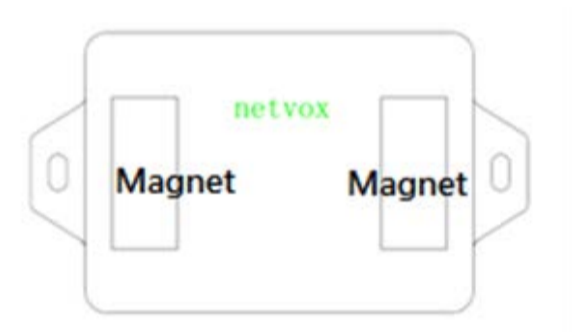


2. The device periodically reports the data according to Max Time. The default Max Time is 3min.

Note: Max Time can be modified by the downlink command, but it is not recommended to set this time too short.

3. The device can be used in scenarios such as:

- Boiler room
- Parking lot
- Gas water heater
- Mine environment monitoring

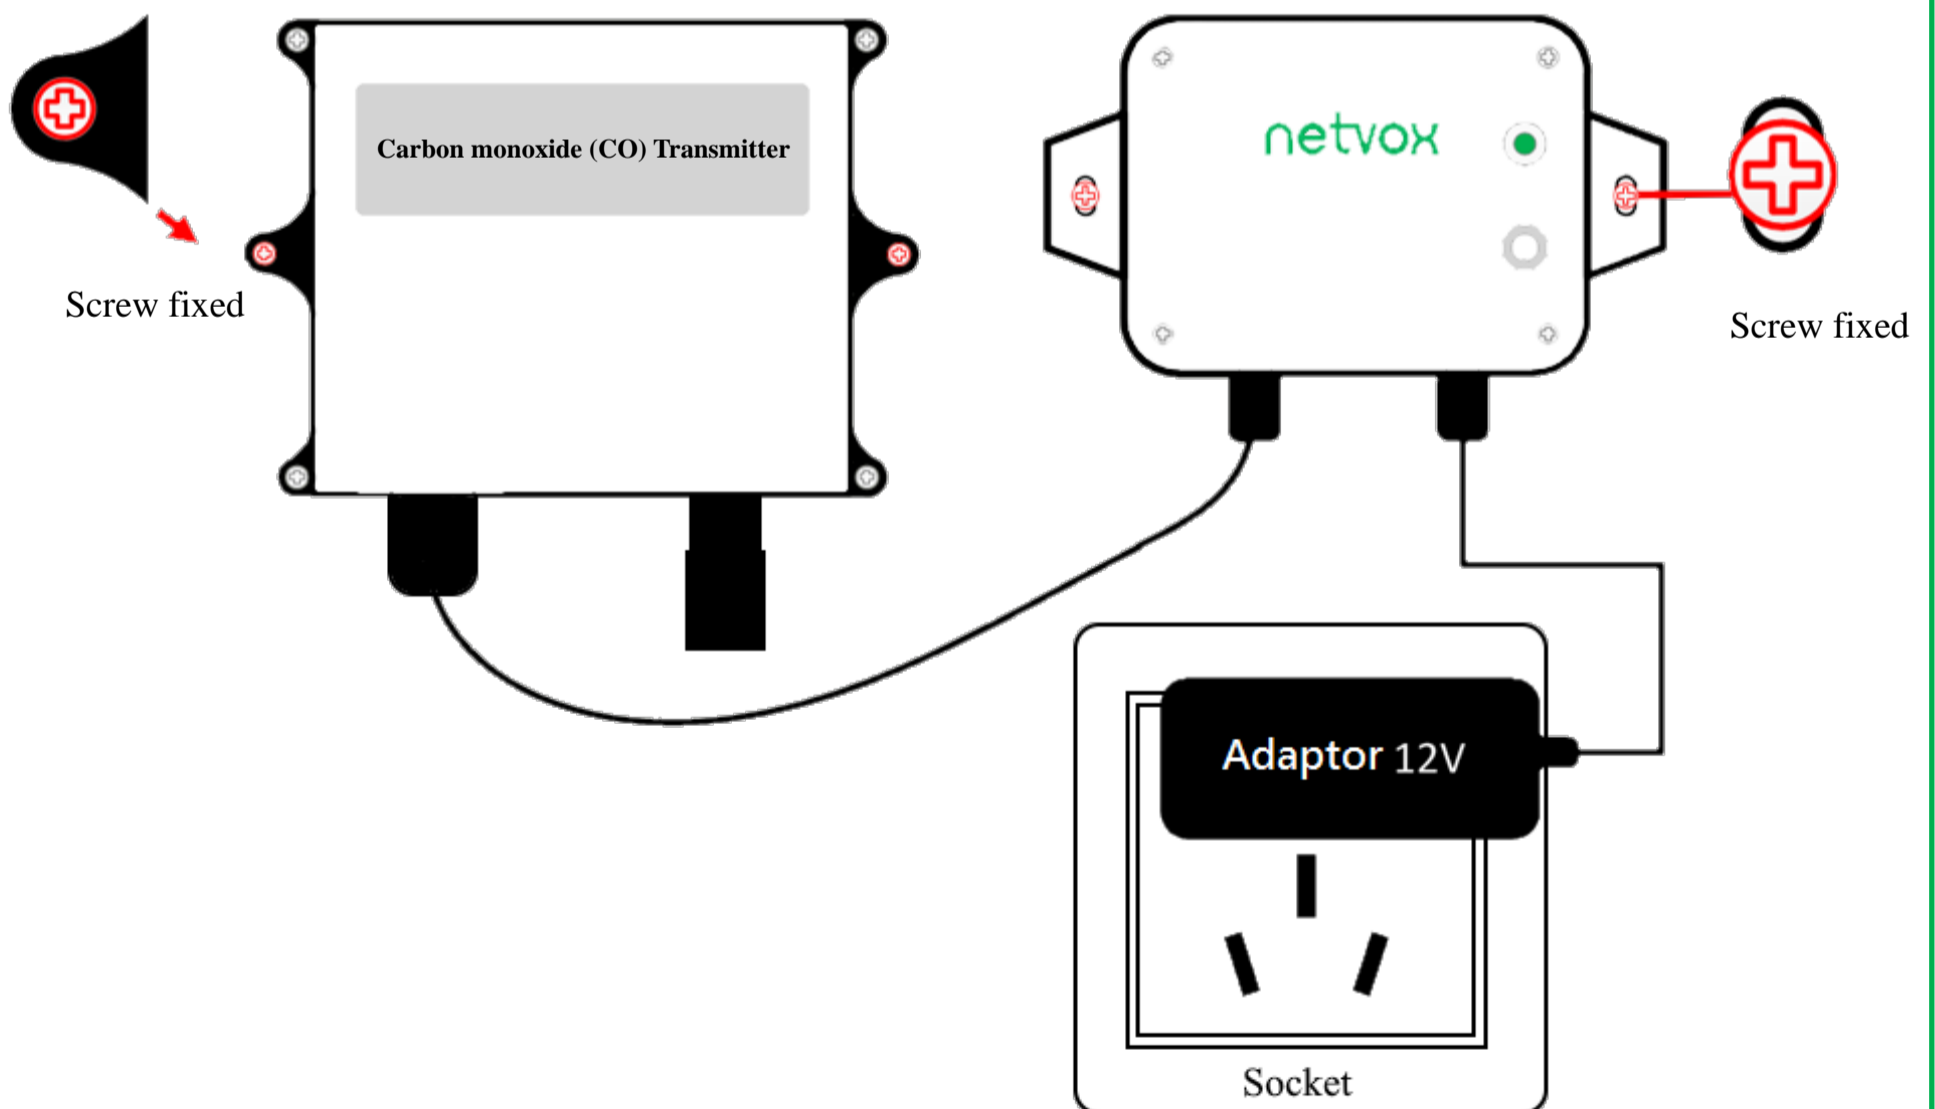

7. Important Maintenance Instructions

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Do not put the device near or submerge into water. Minerals in rain, moisture, and other liquids could cause corrosion of electronic components. Please dry the device, if it gets wet.
- Do not use or store the device in dusty or dirty environments to prevent damage to parts and electronic components.
- Do not store the device in high temperatures. This may shorten the lifespan of electronic components, damage batteries, and deform plastic parts.
- Do not store the device in cold temperatures. Moisture may damage circuit boards as the temperatures rise.
- Do not throw or cause other unnecessary shocks to the device. This may damage internal circuits and delicate components.
- Do not clean the device with strong chemicals, detergents, or strong detergents.
- Do not apply the device with paint. This may block detachable parts and cause malfunction.
- Do not dispose of batteries in fire to prevent explosion.

The instructions are applied to your device, battery, and accessories. If any device is not working properly, please bring it to the nearest authorized service provider for repair.